
 


 





 
 












 
 




 






 
 







 
 



 
 

 
 


 


 
 









Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Audio-	 + 	Shift + Play	
Audio+	 + 	Shift + Pause	
Tone-		I<<	
Tone+	 + 	Shift + >>I	
On/Tim	 + 	Shift + Subt	
Off/Tim	 + 	Shift + Sleep	
Disp		List	
Color+ P.Std		>>	
Mix Scan	 + 	Shift + TV/R	
Tune-	 + 	Shift + Left	
Aft/Caf	 + 	Shift + Ok	
Tune+	 + 	Shift + Right	
Bright- Sys	 + 	Shift + Exit	
Contrast+	 + 	Shift + Ch +	
Color- S.Std		<<	
Contrast-	 + 	Shift + Ch -	
3.*	 + 	Shift + Guide	
4.# 16:9		Format	
Surround	 + 	Shift + Red	
Nicam/Mono	 + 	Shift + Green	
Level L	 + 	Shift + Yellow	
Level R/Woofer	 + 	Shift + Blue	



Original	Recharge	Original	Recharge
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Reveal	 Pause	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 +  Shift + Info	Volume-	 Vol -
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Original	Recharge	Original	Recharge
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Tone+		Smart	

