



 





Original	Recharge
Power DVD	Power
Direct Tv Rec	TV/R
DVD	Smart
SD/PC	Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
*/Cancel	Guide
Input Select	AV
CH+	Ch +

Original	Recharge
CH-	Ch -
ShowView	Blue
Manual Skip	Subt
I<< Skip	I<<
>>I Skip	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause	Pause
Play	Play
Direct Navigator/Top	Menu
Function	Options
Sub Menu	D. Menu
Return	Back
Up	Up
Down	Down
Right/II>	Right





Original	Recharge
 <II/Left	 Left
 Enter	 Ok
 Prog/Check	 Sleep
 Display	 Info
 Status	 3D
 Time Slip	 Format
 Timer	 Shift + AV
 Erase	 Exit
 Rec Mode	 Shift + Rec
 Rec	 Rec
 A/Ext Link	 Red
 B	 Green
 C/Create Chapter	 Yellow
 Audio	 Dual
 Power Tv	 Shift + Power
 AV Tv	 Eject
 CH+ Tv	 Shift + Ch +

Original	Recharge
 CH- Tv	 Shift + Ch -
 Volume+ Tv	 Vol +
 Volume- Tv	 Vol -

