



Original	Rechange
On/Standby	Power
Display	Display / Media
DVD / BD	Shift + 2
VCR / DVR	Shift + 4
CBL/SAT	Shift + 0
Game	Shift + 9
AUX	Shift + 7
TV / TAPE	Shift + 5
TV / TAPE	Shift + 1
TUNER	Shift + 6
PORT	Shift + 8
CD	Shift + 3
Muting	Mute / Dimmer
CH/Disc/Album +	CH + / Page+
Vol+	Vol+
CH/Disc/Album-	CH - / Page-
Vol-	Vol-

Original	Rechange
Up	Up
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Audio	Audio / Lang I/II
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Movie Tv	Red / Netflix / Search
Music	Green / APP / Repeat



 























 

 



 

 

 

 

 

 
 
 

 

 





 



 

 





 

 



Original	Rechange
Game	Yellow / YouTube / Repeat
Stereo	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/--/---10/Dimmer/D.Tun	Guide / EPG / -/--
0/11	0
CLR/Sleep/12	Fav / Marker / PC
CLR/Sleep/12	Sleep / Timer
CLR/Sleep/12	Exit / Cancel / Clear

Original	Rechange





Original		Rechange		Original		Rechange	
	Power BD/DVD		Power		<< BD/DVD		<< / Tune-
	DVD/BD		Smart / List		Play BD/DVD		Play / Slow
	CBL/SAT		Display / Media		>> BD/DVD		>> / Tune+
	Vol+ Receiver		Vol+		Pause BD/DVD		Pause / Step / Freeze
	Vol- Receiver		Vol-		Stop BD/DVD		Stop / Hold
	Top Menu		D.Menu / Top		Search BD/DVD		Red / Netflix / Search
	Up BD/DVD		Up		Repeat BD/DVD		Green / APP / Repeat
	Menu BD/DVD		Menu / Home		Random		Blue / Prime Video / Random
	Left BD/DVD		Left		Play Mode		Yellow / YouTube / Repeat
	Enter BD/DVD		OK		1 BD/DVD		1
	Right BD/DVD		Right		2 BD/DVD		2
	Setup BD/DVD		Setup / OPT /		3 BD/DVD		3
	Down BD/DVD		Down		4 BD/DVD		4
	Return BD/DVD		Back / Return		5 BD/DVD		5
	Audio BD/DVD		Audio / Lang I/II		6 BD/DVD		6
	I<< BD/DVD		I<< / Preset-		7 BD/DVD		7
	>>I BD/DVD		>>I / Preset+		8 BD/DVD		8





Original		Rechange		Original		Rechange	
	9 BD/DVD		9		<< CBL/SAT	+	Shift + << /
	+10/--/-10		Guide / EPG / --		Play CBL/SAT	+	Shift + Play /
	0/11 BD/DVD		0		>> CBL/SAT	+	Shift + >> /
	CLR/12 BD/DVD		Fav / Marker / PC		Pause CBL/SAT	+	Shift + Pause / Step /
	CLR/12 BD/DVD		Exit / Cancel / Clear		Stop CBL/SAT	+	Shift + Stop /
	Power CBL/SAT	+	Shift + Power		Movie Tv/Search CBL/SAT	+	Shift + Red / Netflix /
	CH Disc/Album+ CBL/SAT	+	Shift + CH+ /		Music/Repeat CBL/SAT	+	Shift + Green / APP /
	CH Disc/Album- CBL/SAT	+	Shift + CH- /		Game/Random	+	Shift + Yellow / YouTube /
	Guide CBL/SAT	+	Shift + Guide / EPG / --		Stereo/Play Mode CBL/SAT	+	Shift + Blue / Prime
	Up CBL/SAT	+	Shift + Up		1 CBL/SAT	+	Shift + 1
	Menu/Prev CH CBL/SAT	+	Shift + Menu /		2 CBL/SAT	+	Shift + 2
	Left CBL/SAT	+	Shift + Left		3 CBL/SAT	+	Shift + 3
	Enter CBL/SAT	+	Shift + OK		4 CBL/SAT	+	Shift + 4
	Right CBL/SAT	+	Shift + Right		5 CBL/SAT	+	Shift + 5
	Setup CBL/SAT	+	Shift + Setup / OPT / Tools		6 CBL/SAT	+	Shift + 6
	Down CBL/SAT	+	Shift + Down		7 CBL/SAT	+	Shift + 7
	Return CBL/SAT	+	Shift + Back / Return		8 CBL/SAT	+	Shift + 8

 

 










 

 
 


 
 
 


 
 
 

 

 

 

 





 

 




Original		Recharge	
9	9 CBL/SAT	SHIFT + 9	Shift + 9
0	0/11 CBL/SAT	SHIFT + 0	Shift + 0





Original		Rechange		Original		Rechange	
	Power CD		Power		Play CD		Play / Slow
	CD		Smart / List		>> CD		>> / Tune+
	CH/Disc+ CD		CH+ / Page+		Pause CD		Pause / Step / Freeze
	Vol+ Receiver		Vol+		Stop CD		Stop / Hold
	CH/Disc- CD		CH- / Page-		Search CD		Red / Netflix / Search
	Vol- Receiver		Vol-		Repeat CD		Green / APP / Repeat
	Up CD		Up		Random CD		Blue / Prime Video / Random
	Left CD		Left		Play Mode CD		Yellow / YouTube / Repeat
	Enter CD		OK		1 CD		1
	Right CD		Right		2 CD		2
	Setup CD		Setup / OPT /		3 CD		3
	Down CD		Down		4 CD		4
	Return CD		Back / Return		5 CD		5
	Audio CD		Audio / Lang I/II		6 CD		6
	I<< CD		I<< / Preset-		7 CD		7
	>>I CD		>>I / Preset+		8 CD		8
	<< CD		<< / Tune-		9 CD		9





Original	Recharge	Original	Recharge
+10/--/--10/D.Tun/ Dimmer CD	Guide / EPG / --		
0/11 CD	0		
CLR/Sleep/12	Fav / Marker / PC		





Original		Rechange		Original		Rechange	
	Power Receiver Zone 2		Power		>> Zone 2		>> / Tune+
	CH Disc/Album+ Zone 2		CH+ / Page+		Pause Zone 2		Pause / Step / Freeze
	Vol+ Zone 2		Vol+		Stop Zone 2		Stop / Hold
	CH Disc/Album- Zone 2		CH- / Page-		Movie Tv Zone		Red / Netflix / Search
	Vol- Zone 2		Vol-		Music Zone 2		Green / APP / Repeat
	Up Zone 2		Up		Game Zone 2		Yellow / YouTube / Repeat
	Left Zone 2		Left		Stereo Zone 2		Blue / Prime Video / Random
	Enter Zone 2		OK		1 Zone 2		1
	Right Zone 2		Right		2 Zone 2		2
	Setup Zone 2		Setup / OPT /		3 Zone 2		3
	Down Zone 2		Down		4 Zone 2		4
	Return Zone 2		Back / Return		5 Zone 2		5
	Audio Zone 2		Audio / Lang I/II		6 Zone 2		6
	I<< Zone 2		I<< / Preset-		7 Zone 2		7
	>>I Zone 2		>>I / Preset+		8 Zone 2		8
	<< Zone 2		<< / Tune-		9 Zone 2		9
	Play Zone 2		Play / Slow		+10/--/--10/D.Tun/ Dimmer Zone 2		Guide / EPG / -/-





Original	Rechange
0/11 Zone 2	0
CLR/Sleep/12	Fav / Marker / PC

Original	Rechange

