



 

 





 



 



 



 



 


 












 





 

 





 

 



 







Original		Rechange		Original		Rechange	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		Audio		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		Aspect		Shift + Picture / Format
	4		4		CH -		CH- / Page-
	5		5		EPG / Set		Guide / EPG / -/-
	6		6		Home		Shift + Menu / Home
	7		7		APP		Shift + Green / APP / REPEAT
	8		8		Menu		Menu / Home
	9		9		Up		Up
	List		Smart / List		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	Picture		Picture / Format		Right		Right
	Sound		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down



