



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	+  Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
EPG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Original	Rechange
Display	Display / Media
TV / Radio	TV/Radio /
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol+	Vol+
Auto	Eject / Surround
CH+	CH+ / Page+
Vol-	Vol-
Aspect	Zoom / Size
CH-	CH- / Page-
Source	AV / Input / RDS





Original	Rechange
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Text	Play / Slow
Play/Pause / Text	Pause / Step / Freeze
Play/Pause / Text	Text / Goto
Stop / Index	Stop / Hold
Mix	Smart / List
Reveal	Setup / OPT /
<< / Hold	<< / Tune-
>> / Subpage	>> / Tune+
I<< / Size	I<< / Preset-
>>I / Cancel	>>I / Preset+
TimeShift	D.Menu / Top
Rec	Rec / Rec Mode
FAV-	Shift + CH- /
FAV+	Shift + CH+ /

Page+

Original	Rechange
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

