





































Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 Nicam / A2	 Shift + Audio / Lang I/II
 Aspect	 Zoom / Size
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/0	 Shift + Guide / EPG / --/0
 0	 0

Original	Rechange
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Freeze	 Pause / Step / Freeze
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 EPG	 Guide / EPG / --/0
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear





Original	Recharge	Original	Recharge
Vol+	Vol+	PVR	Smart / List
Info	Info / Angle		
CH+	CH+ / Page+		
Vol-	Vol-		
Mute	Mute / Dimmer		
CH-	CH- / Page-		
Play/Pause / Hold	Play / Slow		
<< / Reveal	<< / Tune-		
>> / Size	>> / Tune+		
Stop / Index	Stop / Hold		
I<<	I<< / Preset-		
>>I / S.Page	>>I / Preset+		
TTX	Text / Goto		
T.Shift	Setup / OPT /		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Rec / Auto	Rec / Rec Mode		

