



Original	Rechange	Original	Rechange
 Open/Close	 Eject / Surround	 Recorder 2	 Display / Media
 Disc Skip	 Text / Goto	 CD	 Shift + 3
 Power	 Power	 Tuner	 Shift + 6
 1	 1	 Line	 Setup / OPT /
 2	 2	 Random	 Blue / Prime Video / Random
 3	 3	 Play	 Play / Slow
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 Repeat	 Green / APP / Repeat
 6	 6	 I<<	 I<< / Preset-
 7	 7	 Stop	 Stop / Hold
 8	 8	 >>I	 >>I / Preset+
 9	 9	 Tuner Preset Up	 >> / Tune+
 0	 0	 Vol +	 Vol+
 +10	 Guide / EPG / -/-	 Muting	 Mute / Dimmer
 Program/Direct	 TV/Radio /	 Tuner Preset	 << / Tune-
 Phono	 Shift + 7	 Vol -	 Vol-
 Recorder 1	 Smart / List	 Disc/USB	 AV / Input / RDS





Original	Recharge	Original	Recharge
 Folder Mode	 D.Menu / Top		
 Folder +	 Up		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Remote/Browse	 Info / Angle		
 Folder -	 Down		

