



Original		Rechange		Original		Rechange	
	DVD / TV / AV		Power		Down / CH-		Down
	1		1		Down / CH-		Ch -
	2		2		Right / Vol+		Right
	3		3		Right / Vol+		Vol +
	4		4		Left / Vol-		Left
	5		5		Left / Vol-		Vol -
	6		6		OK		Ok
	7		7		Pg Up		Shift + Ch +
	8		8		Pg Dn		Shift + Ch -
	9		9		Title		Smart
	0		0		Info		Info
	Mute		Mute		Goto / FAV		Pre Ch
	Repeat / TV/Radio		TV/R		Audio		Dual
	Repeat / TV/Radio		Shift + Text		Sub-T		Subt
	Exit		Exit		Zoom / TTX		Text
	Up / CH+		Up		Zoom / TTX		Eject
	Up / CH+		Ch +		Setup		Options





Original	Rechange	Original	Rechange
 Menu / EPG	 Menu		
 Menu / EPG	 Guide		
 USB	 Media		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		
 Copy/Delete / Rec	 Rec		
 Red / <<	 Red		
 Red / <<	 <<		
 Green / >>	 Green		
 Green / >>	 >>		
 Yellow / I<<	 Yellow		
 Yellow / I<<	 I<<		
 Blue / >>I	 >>I		
 Blue / >>I	 Blue		

