



| Original | Rechange | Original | Rechange |
|----------|---------------|----------|---------------------------|
| | Mute | | Mute / Dimmer |
| | Up | | Up |
| | Power | | Power |
| | Left | | Left |
| | OK / Select | | OK |
| | Right | | Right |
| | Menu | | Menu / Home |
| | Down | | Down |
| | Info | | Info / Angle |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Presets | | Smart / List |
| | 0 | | 0 |
| | P+ | | CH+ / Page+ |
| | Return | | Back / Return |
| | Vol- | | Vol- |
| | Vol+ | | Vol+ |
| | P- | | CH- / Page- |
| | Swap | | Shift + Back / Return |
| | TV / DTV | | TV/Radio / |
| | FAV | | Fav / Marker / PC |
| | Source | | AV / Input / RDS |
| | Red / Page+ | | Shift + CH+ / |
| | Red / Page+ | | Red / Netflix / Search |
| | Green / Page- | | Green / APP / Repeat |
| | Green / Page- | | Shift + CH- / |
| | Yellow | | Yellow / YouTube / Repeat |



