














 









 






 






	Original	Recharge	Original	Recharge
	TV Direct	 TV/Radio /		Play VCR
	Power Audio	 Audio / Lang I/II		Play / Slow
	Power DVR/DVD	 OK		<< / Tune-
	Power VCR	 Shift + Power		Stop / Memory
	Power STB	 Power		Stop / Hold
	Power TV	 Shift + OK		Pause / Step / Freeze
	DVR/DVD	 Fav / Marker / PC		>> / Tune+
	VCR	 Shift + Guide / EPG / -/-		Smart Surround/Setup
	TV	 Shift + TV/Radio / Program		Display/On
	FM/AM	 Smart / List		1 VCR
	Video	 Shift + Red / Netflix /		1 STB
	Tv/Video	 Red / Netflix / Search		AD Input
	Muting	 Mute / Dimmer		2 VCR
	Channel+	 CH+ / Page+		2 STB
	Vol+	 Vol+		Decode
	Channel-	 CH- / Page-		3 VCR
	Vol-	 Vol-		3 STB
				4 VCR
				4 STB





	Original	Rechange		Original	Rechange
BASS BOOST	4	Bass Boost	SHIFT + AUDIO	LANG I/II	Shift + Audio / Lang I/II
C.TONE	5	5 VCR	SHIFT + 5	TAPE	Shift + 5
C.TONE	5	5 STB	5	5	5
C.TONE	5	C. Tone	TITLE SOUND		Sound / Title
MIDNIGHT	6	6 VCR	SHIFT + 6	TUNER	Shift + 6
MIDNIGHT	6	6 STB	6	6	6
MIDNIGHT	6	Midnight	SHIFT + SMART	LIST	Shift + Smart / List
7	7 VCR	SHIFT + 7	AUX - HDD	7	Shift + 7
7	7 STB	7	7	7	7
A.POSITION	8	8 VCR	SHIFT + 8	USB	Shift + 8
A.POSITION	8	8 STB	8	8	8
A.POSITION	8	A. Position	YouTube REPEAT A-B		Yellow / YouTube / Repeat
9	9 VCR	SHIFT + 9	BLUETOOTH	9	Shift + 9
9	9 STB	9	9	9	9
SLIDE EFFECT	Effect	TOP MENU D.MENU			D.Menu / Top
0	0 VCR	SHIFT + 0	HDMI - BAT	0	Shift + 0
0	0 STB	0	0	0	0

	Original	Rechange		Original	Rechange
100+ +10	+10 TV	GUIDE EPG			Guide / EPG / -/-
DIMMER DISPLAY	Display/Dimmer	SHIFT + MEDIA DISPLAY			Shift + Display / Media
SURROUND	Surround	SURROUND			Eject / Surround
SLEEP	Sleep	TIMER SLEEP			Sleep / Timer
REC PAUSE	Rec Pause	REC MODE			Rec / Rec Mode
L-FRONT	Front L+	Up			Up
FRONT-R	Front R+	SHIFT + Up			Shift + Up
CENTER	Center+	SHIFT + TUNE+			Shift + >> /
TEST TONE	Test Tone	GOTO TEXT			Text / Goto
L-FRONT	Front L-	Down			Down
FRONT-R	Front R-	SHIFT + Down			Shift + Down
CENTER	Center-	SHIFT + TUNE-			Shift + << /
D.EQ FREQ	D.EQ.Freq	FORMAT PICTURE			Picture / Format
L-SURR	Surr L+	SHIFT + Right			Shift + Right
SURR-R	Surr R+	Right			Right
SUBWFR	Subwfr+	SHIFT + CH PAGE			Shift + CH+ /
D.EQ LEVEL	D.EQ.Level+	SHIFT + VOL			Shift + Vol+









Original	Recharge
Power Audio	+  Shift + Power
Power Tv	Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
I<</Tuning-	I<< / Preset-
FM Mode FM/AM	+  Shift + TV/Radio / Program
>>I/Tuning+	>>I / Preset+
Memory FM/AM	+  Shift + Smart / List
TA/News/Info	Smart / List
PTY- FM/AM	TV/Radio /
PTY+ FM/AM	Guide / EPG / -/-
PTY Search	Red / Netflix / Search
Display FM/AM	Display / Media
1 FM/AM	+  Shift + 1

Original	Recharge
1 TV	1
2 FM/AM	+  Shift + 2
2 TV	2
3 FM/AM	+  Shift + 3
3 TV	3
4 FM/AM	+  Shift + 4
4 TV	4
5 FM/AM	+  Shift + 5
5 TV	5
6 FM/AM	+  Shift + 6
6 TV	6
7 FM/AM	+  Shift + 7
7 TV	7
8 FM/AM	+  Shift + 8
8 TV	8
9 FM/AM	+  Shift + 9
9 TV	9









	Original	Rechange	Original	Rechange
	Power DVD		Power	
	I<<		I<< / Preset-	
	Play		Play / Slow	
	>>I		>>I / Preset+	
	<<		<< / Tune-	
	Stop		Stop / Hold	
	Pause		Pause / Step / Freeze	
	>>		>> / Tune+	
	Top Menu		D.Menu / Top	
	Up		Up	
	Menu		Menu / Home	
	Left		Shift + Left	
	Enter		OK	
	Right		Right	
	Down		Down	
	On Screen		Shift + Display / Media	
	Audio		Audio / Lang I/II	
	Subtitle		Subtitle / EQ	
	DVD Zoom		Zoom / Size	
	HDD Sound Effect		Sound / Title	
	Set Up		Setup / OPT /	
	1		1	
	2		2	
	3		3	
	←		Left	
	4		4	
	5		5	
	6		6	
	VFP Progressive		Smart / List	
	7		7	
	8		8	
	9		9	
	Angle/Slide Effect		Info / Angle	
	10		Guide / EPG / -/-	









Original	Rechange
Power	Power
Channel+	CH+ / Page+
Channel-	CH- / Page-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down

Original	Rechange
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
←	Left
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9





