







Original	Recharge
TV	Shift + 1
AV.SV	AV / Input / RDS
SCART1	Shift + 3
PC	Shift + Fav / Marker / PC
SCART2	Shift + 2
Mute	Mute / Dimmer
Up / P+	Up
Up / P+	CH+ / Page+
Exit	Exit / Cancel / Clear
Left / Vol-	Left
Left / Vol-	Vol-
Menu / Enter	OK
Menu / Enter	Menu / Home
Right / Vol+	Right
Right / Vol+	Vol+
Down / P-	Down
Down / P-	CH- / Page-

Original	Recharge
Text	Text / Goto
Red	Red / Netflix / Search
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Green	Green / APP / Repeat
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+100	Guide / EPG / -/-
0	0
RTN	Back / Return





Original	Recharge
 RTN	 Fav / Marker / PC
 Sound	 Sound / Title
 PIP Source Up	 Shift + Up
 Display	 Display / Media
 PIP Position	 Shift + Left
 PIP On/Off	 Shift + OK
 PIP Size	 Shift + Right
 APC	 D.Menu / Top
 PIP Source	 Shift + Down
 ARC	 Setup / OPT /
 []	 Stop / Hold
 [≡i]	 Play / Slow
 [↕]	 >> / Tune+
 [≡?]	 Pause / Step / Freeze
 [○]	 I<< / Preset-
 [≡X]	 << / Tune-
 Sleep	 Sleep / Timer

Original	Recharge
 Reset	 Smart / List
 Power	 Power

