



Original		Rechange		Original		Rechange	
	Power		Power		+10		Guide
	Quick OSD		Media		Cancel		Exit
	FL Select		Smart		Play Speed		Red
	Open/Close		Eject		Dialogue		Green
	Advanced		TV/R		Manual Skip		Yellow
	Picture Mode		Format		Quick Replay		List
	Repeat		Text		I<< Skip		I<<
	1		1		Skip >>I		>>I
	2		2		<< Slow/Search		<<
	3		3		Slow/Search >>		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6		Play		Play
	7		7		Top Menu		Shift + Menu
	8		8		Menu		Menu
	9		9		Functions		D. Menu
	0		0		Return		Back





	Original	Recharge	Original	Recharge
	Up			
	Down			
	Right			
	Left			
	Enter			
	Subtitle			
	Audio			
	Angle/Page			
	Play Mode	+		Shift + Play
	Setup			Options
	Transfer Mode			AV
	Zoom	+		Shift + Eject
	DNR			3D

