 

 



 
 


 

 
 


 

 

 
 


 

 

 



 


 

 
 


 
 


 
 



 






Original		Recharge		Original		Recharge	
	Power		Power		6		6
	OPC		Smart		7		7
	Sleep		Sleep		8		8
	Select		Shift + Ok		9		9
	[i+]		Info		0		0
	[[<>]]		Format		Recall		Pre Ch
	AV Mode		Shift + AV		DTV		TV/R
	Mute		Options		[...]		Subt
	Fast Forward		Shift + Options		[=?]		3D
	Card		Media		[≡i]		Shift + Info
	REC Stop		Rec		[≡]		Text
	3D-Y/C		Shift + 3		Sound		Dual
	1		1		Mute		Mute
	2		2		Vol+		Vol +
	3		3		Vol-		Vol -
	4		4		P+		Ch +
	5		5		P-		Ch -





	Original	Recharge	Original	Recharge
	Input	 AV		AV
	DTV Menu	 D. Menu		
	Menu	 Menu		
	Guide	 Guide		
	List	 List		
	Up	 Up		
	Left	 Left		
	Right	 Right		
	OK	 Ok		
	Down	 Down		
	Exit	 Exit		
	Return	 Back		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

