



 


 
 


 












 






















 



 



 
 


 




 







Original	Rechange	Original	Rechange
 RCVR On	 Power	 RCVR Down	 Down
 RCVR Standby	 Shift + Power	 RCVR Angle / Level Down	 Format
 RCVR Return	 Back	 RCVR Subtitle / Level Up	 Subt
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR	 Ch +	 RCVR Play	 Play
 RCVR CH-/Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Vol+	 Vol +	 RCVR <<	 <<
 RCVR Vol-	 Vol -	 RCVR Stop	 Stop
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR >>	 >>
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Rec /	 Rec
 RCVR Test / Menu	 Menu	 RCVR Pause / Play Rev.	 Pause
 RCVR Audio Sel / TV/VCR	 TV/R	 RCVR Input Sel.	 1
 RCVR Muting	 Mute	 RCVR Input Sel.	 2
 RCVR Up	 Up	 RCVR Input Sel.	 3
 RCVR Left	 Left	 RCVR Input Sel.	 4
 RCVR Enter	 Ok	 RCVR Input Sel.	 5
 RCVR Right	 Right	 RCVR Input Sel.	 6



TUN




 
 




 

 
 
 












 
 



 



 

 

 
 
 
 
 
 
 





 



 

 

 



 






Original	Recharge	Original	Recharge
RCVR Input Sel.	7		
RCVR Input Sel.	8		
RCVR Input Sel.	9		
RCVR Input Sel.	0		
RCVR Pure A	+ Shift + 1		
RCVR Direct	+ Shift + 2		
RCVR Stereo	+ Shift + 3		
RCVR Surr.	+ Shift + 4		
RCVR All St.	+ Shift + 5		
RCVR DSP	+ Shift + 6		
RCVR SP A	+ Shift + 7		
RCVR SP B	+ Shift + 8		
RCVR CINE	+ Shift + 9		
RCVR Dimmer	+ Shift + 0		
RCVR Display	Info		
RCVR Display	Guide		
RCVR Zone 2	Pre Ch		

Original	Recharge





Original	Recharge	Original	Recharge
 DVD On	 Power	 DVD Play	 Play
 DVD Standby	 Shift + Power	 DVD >>I	 >>I
 DVD Sleep	 Sleep	 DVD <<	 <<
 DVD Return	 Back	 DVD Stop	 Stop
 DVD Setup	 Options	 DVD >>	 >>
 DVD Disc+	 Ch +	 DVD Random	 Rec
 DVD Disc-	 Ch -	 DVD Pause	 Pause
 DVD Vol+	 Vol +	 DVD Eject	 Exit
 DVD Vol-	 Vol -	 DVD Input Sel.	 1
 DVD CH Sel / Top Menu	 Shift + Menu	 DVD Input Sel. CD	 2
 DVD CH Sel / Top Menu	 D. Menu	 DVD Input Sel. V1	 3
 DVD Test /	 Menu	 DVD Input Sel. V2	 4
 DVD Audio Sel / TV/VCR	 TV/R	 DVD Input Sel.	 5
 Muting	 Mute	 DVD Input Sel.	 6
 DVD Angle /	 Format	 DVD Input Sel. V3	 7
 DVD Subtitle / Level+	 Subt	 DVD Input Sel. V4	 8
 DVD I<<	 I<<	 DVD Input Sel. V5	 9









 




 



 



 



 







 

 
 
 














 

 



Original		Rechange	
	DVD Input Sel. PH		0
	DVD 1	+	Shift + 1
	DVD 2	+	Shift + 2
	DVD 3	+	Shift + 3
	DVD 4	+	Shift + 4
	DVD 5	+	Shift + 5
	DVD 6	+	Shift + 6
	DVD 7	+	Shift + 7
	DVD 8	+	Shift + 8
	DVD 9	+	Shift + 9
	DVD 0	+	Shift + 0
	DVD +10 / --/--		Guide
	DVD Search/Enter		Pre Ch

Original		Rechange	





Original		Rechange		Original		Rechange	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		Ch +		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	Subtitle		Subt		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Random		Rec				
	Eject		Eject				
	1		1				

