



Original	Recharge
Power On	Power
Power Off	Shift + Power
Dimmer	Mute / Dimmer
Open/Close	Eject / Surround
A-B Repeat	Shift + Yellow / YouTube /
1	1
2	2
3	3
Repeat	Shift + Green / APP /
4	4
5	5
6	6
Random	Shift + Blue / Prime
7	7
8	8
9	9
Zoom	Zoom / Size

Original	Recharge
Clear	Exit / Cancel / Clear
0	0
Search Mode	Shift + Red / Netflix /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Pop Up Menu /	Menu / Home
Left	Left
Enter	OK
Right	Right
Down	Down
Setup	Setup / OPT /
Return	Back / Return
Angle	Info / Angle





Original		Rechange	
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Pure Direct		Sound / Title
	Display		Display / Media
	Mode		Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	<<		<< / Tune-
	Still/Pause		Pause / Step / Freeze
	>>		>> / Tune+
	HDMI		Picture / Format
	Input Up Amp/Receiver		CH+ / Page+
	Vol+		Vol+
	Input Down Amp/Receiver		CH- / Page-
	Vol-		Vol-

Original		Rechange	



Amp/Receiver