 


 











 


 
 









 

 


 
 


 
 


 
 


 



 

 


 

 



 




 





Original		Recharge		Original		Recharge	
	Power		Power		Random		TV/R
	Sleep		Sleep		Repeat		Text
	Timer Play		AV		MD Stop		Down
	Timer Rec		Rec		MD Pause		Up
	1		1		MD Play		Ok
	2		2		MD <</ <<		Left
	3		3		MD >>/>>		Right
	4		4		Auto/Mono		Dual
	5		5		CD		Red
	6		6		TAPE		Green
	7		7		EXT/MD		Yellow
	8		8		Stop		Stop
	9		9		Pause		Pause
	0		0		Play		Play
	≥10		Guide		<</<<		<<
	Program		Shift + Sleep		>>/>>		>>
	Cancel		Back		TUNER		Blue



