









 



 





 
















Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 <<<	 I<<< / Preset-
 >>>	 >>>I / Preset+
 :Q	 Sound / Title
 TV Play	 Eject / Surround
 Format	 Picture / Format
 Live TV	 TV/Radio /
 ≡	 D.Menu / Top
 ⚙	 Setup / OPT /
 Green / TTX	 Text / Goto

Original	Recharge
 Source	 AV / Input / RDS
 Home	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Del	 Exit / Cancel / Clear
 Blue / Info	 Info / Angle
 Back	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-
 Internet	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Mouse	 Display / Media
 1	 1





Original		Recharge		Original		Recharge	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Red / EPG		Guide / EPG / -/--				
	←]		Fav / Marker / PC				
	Red / EPG		Red / Netflix / Search				
	Green / TTX		Green / APP / Repeat				
	Yellow / FAV		Yellow / YouTube / Repeat				
	Blue / Info		Blue / Prime Video / Random				
	Yellow / FAV		Shift + Fav / Marker / PC				

