 




Original	Recharge
 Standby - On	 Power
 Rec	 Shift + Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back
 T/C	 Text
 CH+	 Ch +
 CH-	 Ch -
 Volume+	 Vol +

Original	Recharge
 Volume-	 Vol -
 HDD	 Red
 DVD	 Green
 TUNER	 Yellow
 DV	 Blue
 Select	 Media
 TV/DVD	 Smart
 Source	 AV
 DVD Rec	 Rec
 I<< Prev	 I<<
 I<< Prev	 <<
 >>I Next	 >>I
 >>I Next	 >>
 Shuffle	 TV/R
 Zoom	 Eject
 Stop	 Stop
 Play	 Play

 

 
 











 


 
 






 




 

 

 
 


 



 

 


 

 

 
 
Original	Recharge	
On/Off		Power
Prev		Ch -
Slow Down		Shift + Left
Next		Ch +
Audio Off		Mute
Title		List
Slow Up		Shift + Right
Subt.		Subt
Auto/Track		Shift + 3D
Rep/A-B		Shift + Text
Menu		Menu
Stop		Stop
Repeat/1/All		Text
Menu Up		Up
Pause		Pause
Zoom		Eject
DVD/TV		Smart

Original	Recharge	
Menu Left		Left
OK Enter		Ok
Return		Back
Menu Right		Right
Progr.		Sleep
Display		Shift + Info
Menu Down		Down
Volume+		Vol +
Next		>>
Top Menu		D. Menu
Volume-		Vol -
1		1
Prev.		<<
2		2
Syst.Preset		Exit
3		3
4		4





Original	Recharge	Original	Recharge
5		5	5
Digest	 + 	Shift + List	
6		6	6
Auto Scan	 + 	Shift + Options	
Remain	 + 	Shift + Smart	
7		7	7
Timer	 + 	Shift + AV	
Angle		Format	
Pbc		Yellow	
Random	 + 	Shift + TV/R	
Shuffle	 + 	Shift + D. Menu	
Key-	 + 	Shift + Down	
8		8	8
9		9	9
Setup		Options	
Mode	 + 	Shift + Media	
Video		AV	

Original	Recharge	Original	Recharge
Resume	 + 	Shift + Ok	
Key+	 + 	Shift + Up	
Record		Rec	
Game		Media	
R/L		Red	
Np		Green	
Audio	 + 	Shift + Dual	
Play		Play	
+10		Guide	
Karaoke/Step	 + 	Shift + Pause	
Play/Back	 + 	Shift + Play	
Echo+	 + 	Shift + Ch +	
Info		Info	
Echo-	 + 	Shift + Ch -	
Rewind		<<	
0		0	
C/CH		Pre Ch	





