 


 










 


 
 


 



 




 
 

 


 

 
 

 

 



 



 




 
 
 












	Original	Recharge	Original	Recharge
	 Standby	 Power	 Book.J	 Shift + 3D
	 Mute	 Mute	 R.Skip	 I<<
	 1	 1	 REW	 <<
	 2	 2	 FWD	 >>
	 3	 3	 F.Skip	 >>I
	 4	 4	 Rec	 Rec
	 5	 5	 Stop	 Stop
	 6	 6	 Play	 Play
	 7	 7	 Pause	 Pause
	 8	 8	 Menu	 Menu
	 9	 9	 Exit	 Exit
	 0	 0	 Info	 Info
	 F.List	 Media	 Back	 Back
	 RES	 Smart	 Up	 Up
	 Repeat	 Text	 Left	 Left
	 Capture	 Format	 OK	 Ok
	 Book.M	 3D	 Right	 Right





Original	Rechange	Original	Rechange
	Down		Down
	Volume+		Vol +
	Volume-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Red / Audio		Red
	Red / Audio		Dual
	Green / Subt		Green
	Green / Subt		Subt
	Yellow / Text		Yellow
	Yellow / Text		Shift + Text
	Blue / Sleep		Blue
	Blue / Sleep		Sleep
	EPG		Guide
	FAV		Pre Ch
	SAT List		List
	Zoom		Eject
			Option1
			Option2
			TV / Radio
			TV / STB
			Options
			Shift + Options
			TV/R
			AV

