
 







 


 



 

 



 
 





Original	Recharge	Original	Recharge
	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	White		Shift + Blue
	Guide		Guide
	[⊖]		Shift + Power
	[?]		Smart
	[↕]		3D
	Text		Text
	□→		AV
	□→		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info





Original	Recharge	Original	Recharge
 P<P / -/--	 PRE-CH Pre Ch		
 I-II	 +  Shift + Dual		
 [F.F./R.R.]	 Stop		
 [1 2]	 Media		
 [Smart Audio]	 TV/R		
 [Smart Picture]	 Dual		
 [F.F./R.R.]	 Format		
 Rec DNR	 +  Shift + Format		
	 Rec		

