




 



 


 
 



 

 





 


 
 


 
 
 


 





 

 

 

 
 
 

 











 










Original	Recharge	Original	Recharge
 Power	 Power	 CH+	 Ch +
 ShowView	 3D	 CH-	 Ch -
 AV	 AV	 Vol+	 Vol +
 Direct Tv Rec	 TV/R	 Vol-	 Vol -
 Rec	 Rec	 HDD	 Media
 1	 1	 DVD	 Smart
 2	 2	 << Slow/Search	 <<
 3	 3	 Slow/Search >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 Top Menu / Direct Navigator	 D. Menu
 8	 8	 Menu / Play List	 Menu
 9	 9	 Up	 Up
 0	 0	 Left	 Left
 -/--	 Guide	 Enter	 Ok
 Cancel	 Exit	 Right	 Right











 
 
 


 
 







 

 

 








Original	Rechange
 Down	 Down
 Functions	 Options
 Return	 Back
 Prog/Check	 Sleep
 Timer	 Shift + AV
 Display	 Info
 Time Slip	 Text
 Dubbing	 Subt
 Rec Mode	 Shift + Rec
 I<< Skip	 I<<
 Skip >>I	 >>I
 A/Input Select	 Eject
 B/Status	 List
 C/AV Link	 Yellow
 D/Manual Skip	 Format
 Erase	 Dual
 Audio	 Shift + Dual

Original	Rechange
 Position	 Green
 Marker	 Pre Ch





	Original	Recharge
	Power	 Power
	CH+	 Ch +
	CH-	 Ch -
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	-/--	 GUIDE Guide
	A	 Red
	B	 Green
	C	 Yellow

	Original	Recharge
	D	 Blue

