


 

 

 



 

 

 

 

 







 













 

 



 


Original	Recharge
 Power	 Power
 HDD	 Shift + Media
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Cancel	 Exit
 AV	 AV
 Input Select	 Eject

Original	Recharge
 Direct Tv Rec	 TV/R
 ShowView	 3D
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 Menu / Play List	 Menu
 Top Menu / Direct Navigator	 D. Menu
 Functions	 Options
 Return	 Back







 








 

 

 







 

 
 
 
 
 
 



Original	Recharge
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Rec	 Rec
 Frame II>	 Shift + Right
 <II Frame	 Shift + Left
 Manual Skip	 Format
 Erase	 Text
 Time Slip	 Smart
 Prog/Check	 Sleep
 Timer	 Shift + AV
 Marker	 Pre Ch
 Dubbing	 Subt
 Status	 List
 Rec Mode	 Shift + Rec



Original	Recharge
 A/Display	 Red
 A/Display	 Info
 B/Position	 Green
 C/Audio	 Yellow
 C/Audio	 Dual
 D/AV Link	 Blue







	Original	Rechange
	Power	 Power
	CH+	 Ch +
	CH-	 Ch -
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	-/--	 GUIDE Guide
	A	 Red
	B	 Green
	C	 Yellow

	Original	Rechange
	D	 Blue

