




Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute		5		5
	Display		Shift + Info		6		6
	Auto		Smart		7		7
	Pic. Size		Eject		8		8
	P.Mode		Format		9		9
	S.Mode		Shift + Dual		0		0
	Still		Pause		-/--		Shift + Guide
	DVB Source		Media		Return		Back
	Info		Info		System		Options
	FAV		Pre Ch		Nicam / A2		List
	EPG		Guide		Fav-		I<<
	Audio		Dual		Fav+		>>I
	Subtitle		Subt		Menu		Menu
	1		1		Exit		Exit
	2		2		Up / CH+		Up
	3		3		Up / CH+		Ch +



