

 

















Original	Rechange
 Power	 Power
 [=i] / Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=?] / AV	 AV / Input / RDS
 0	 0
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Rechange
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 D.Menu / Top
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red / <<	 Shift + Red / Netflix /
 Red / <<	 Red / Netflix / Search





Original	Recharge	Original	Recharge
 Green / >>>	 Green / APP / Repeat		
 Green / >>>	 +  Shift + Green / APP /		
 Yellow / <<<	 +  Shift + Yellow / YouTube /		
 Yellow / <<<	 Yellow / YouTube / Repeat		
 Blue / >>>	 Blue / Prime Video / Random		
 Blue / >>>	 +  Shift + Blue / Prime		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 +  Shift + AV / Input / RDS		
 Text / Play/Pause	 +  Shift + Text /		
 [=□] / Stop / Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [=↕] / Format	 Display / Media		
 [=X]	 Picture / Format		
 [=⊙] / Subtitle	 Subtitle / EQ		
 File	 Setup / OPT /		
 Rec	 Rec / Rec Mode		

