

 



 


 














 




 




Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0
 0 / AV	 AV
 Mute	 Mute
 PIP	 Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Rechange
 Blue / Freeze	 Blue
 Mosaic	 Media
 Recall	 Back
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Right / V+	 Right
 Right / V+	 Vol +
 Left / V-	 Left
 Left / V-	 Vol -
 Menu	 Menu
 OK	 Ok
 16:9	 Format
 Text	 Text
 Text Mix	 Shift + Text
 Text Subpage	 Subt





	Original	Recharge	Original	Recharge
	Text Index	INFO		Info
	PP	PRE-CH		Pre Ch
	Text Hold			Stop
	Text Size / Zoom			Eject
	Text Cancel	EXIT		Exit
	Text Reveal	OPT		Options
	S/M/D	DUAL		Dual

