



 




 
 

 



 

 





















Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Pause / Step / Freeze
 0	 0

Original	Rechange
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Home	 Shift + Menu /
 Vol+	 Vol+





	Original	Recharge	Original	Recharge
	CH-	CH- / Page-		Zoom-
	Mouse	Smart / List		Zoom+
	Vol-	Vol-		EPG
	<< / Text	<< / Tune-		DTV / Radio
	<< / Text	Text / Goto		Rec
	>> / Hold	Shift + Stop /		Subtitle
	>> / Hold	>> / Tune+		
	l<< / Mix	l<< / Preset-		
	l<< / Mix	Shift + Text /		
	>>l / Reveal	>>l / Preset+		
	Play/Pause / Index	Play / Slow		
	Stop / Size	Stop / Hold		
	Stop / Size	Zoom / Size		
	FAV	Fav / Marker / PC		
	Aspect	Shift + Picture / Format		
	File	Display / Media		
	Delete	Eject / Surround		
			Shift + Down	
			Shift + Up	
			Guide / EPG / -/-	
			TV/Radio /	
			Rec / Rec Mode	
			Subtitle / EQ	

