


Original		Rechange		Original		Rechange	
	Power		Power		Picture		Format
	Mute		Mute		AV		AV
	1		1		Menu		Menu
	2		2		PR+		Ch +
	3		3		Up		Up
	4		4		PR-		Ch -
	5		5		Down		Down
	6		6		Right		Right
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Left		Left
	0		0		Up VCR		Shift + Ch -
	Red/Zoom		Red		UP [≡]		Shift + Text
	Green/00		Green		Up DVD		Shift + Up
	Yellow		Yellow		Down VCR		Shift + Ch +
	Blue		Blue		Down DVD		Shift + Down
	Text		Text		<< VCR		Shift + <<

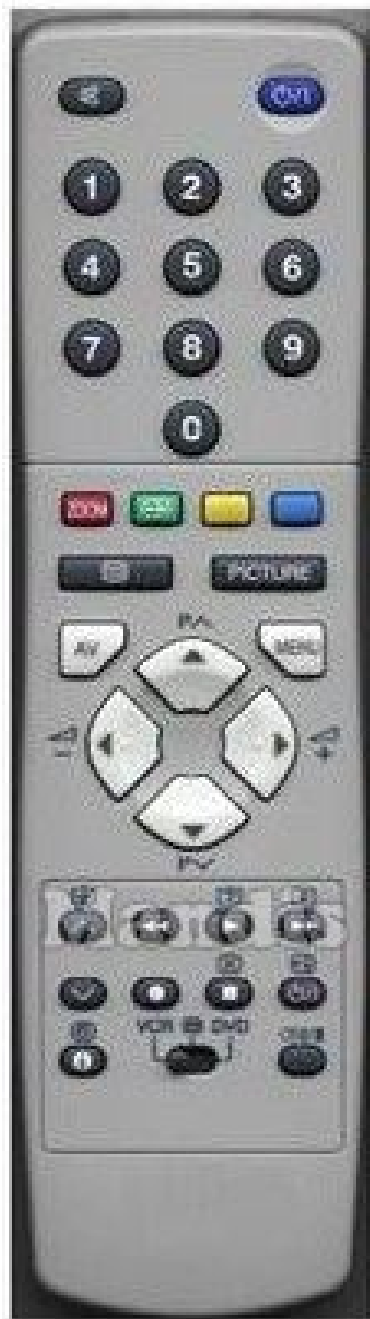



Original	Recharge	Original	Recharge
<< DVD	<<		
Play/[?] VCR	+ Shift + Play		
Play/[?] [≡]	Eject		
Play/[?] DVD	Play		
>>/[+] VCR	+ Shift + >>		
>>/[+] [≡]	+ Shift + Right		
>>/[+] DVD	>>		
Rec VCR	+ Shift + Rec		
Stop/[X] VCR	+ Shift + Stop		
Stop/[X] [≡]	EXIT Exit		
Stop/[X] DVD	Stop		
Standby/[≡i] VCR	+ Shift + Power		
Standby/[≡i] [≡]	MEDIA Media		
Standby/[≡i] DVD	SMART Smart		
i/Timer	INFO Info		
O))/	DUAL Dual		

