

 












 

 
 
 
 
 



 
 
 
 
 

 

 
 


 


 
 
 
 

 


 


 
 
 

 

 



 
 

 
















Original		Rechange		Original		Rechange	
	Power		Power		7		7
	Theatre		Smart		8		8
	One-Touch Play	 + 	Shift + Play		9		9
	Eject		Eject		0		0
	Sleep		Sleep		Clear		Exit
	Display	 + 	Shift + Info		Enter		Pre Ch
	Function		Options		Picture Navi		List
	Tone		3D		Audio		Dual
	Night	 + 	Shift + Sleep		Subtitle		Subt
	Dimmer	 + 	Shift + Mute		D.Tuning		Media
	Repeat		Text		Angle		Format
	1		1		DVD Top Menu	 + 	Shift + Menu
	2		2		DVD Menu		D. Menu
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Right		Right



 




 


 

 

 
 
 

 

 

 

 

 



 
 



 








 

 



 

 

Original	Recharge
 Down	 Down
 Return	 Back
 System Menu	 Menu
 [+] Display	 Info
 I << / Preset-	 I <<
 Replay	 Shift + Left
 Advance	 Shift + Right
 >> I / Preset+	 >> I
 << / < I / Tuning-	 <<
 Play	 Play
 >> / I > / Tuning+	 >>
 Pause	 Pause
 Stop	 Stop
 TV	 TV/R
 Muting	 Mute
 Volume+	 Vol +
 Volume-	 Vol -

Original	Recharge
 Sound Mode+	 Ch +
 Sound Mode-	 Ch -





	Original	Recharge
	Power	 Power
	[i+]	 Info
	Analog	 Media
	Digital	 Smart
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	Text	 Text
	-/--	 Shift + Guide
	Guide	 Guide

	Original	Recharge
	Source	 AV
	Tools / Options	 Options
	Home / Menu	 Menu
	Muting	 Mute
	Volume+	 Vol +
	Volume-	 Vol -
	Prog+	 Ch +
	Prog-	 Ch -

