


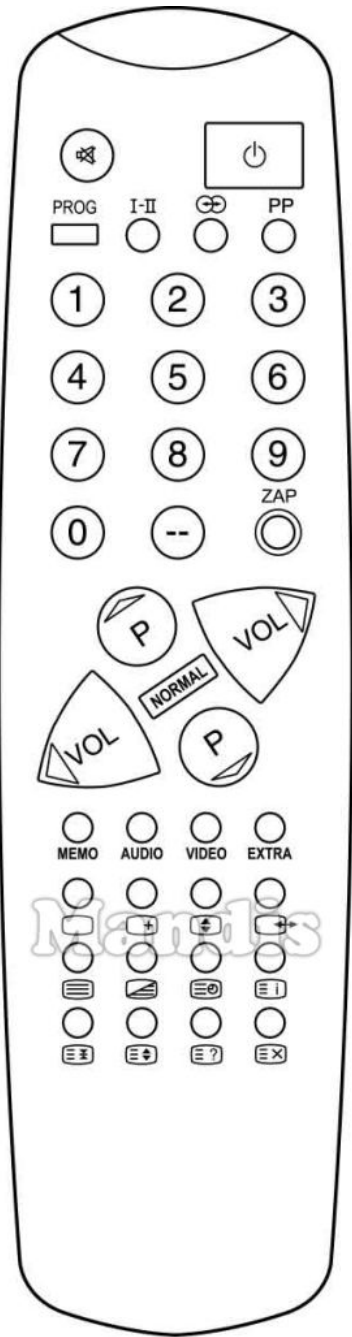






















Original		Recharge		Original		Recharge	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O↔O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[]		Display / Media
	--		Guide / EPG / --		[+]		Stop / Hold





Original	Recharge	Original	Recharge
	[♦]	 OPT-TOOLS SETUP	Setup / OPT /
	[]↔	 TOP MENU D.MENU	D.Menu / Top
	[≡]	 GOTO TEXT	Text / Goto
	[/≡]	 SHIFT +  GOTO TEXT	Shift + Text /
	[≡ ⊕]	 EQ SUBTITLE	Subtitle / EQ
	[≡ i]	 ANGLE INFO	Info / Angle
	[≡ □]	 STEP-FREEZE 	Pause / Step / Freeze
	[≡ ♦]	 SIZE ZOOM	Zoom / Size
	[≡ ?]	 RDS AV INPUT	AV / Input / RDS
	[≡ X]	 CLEAR EXIT CANCEL	Exit / Cancel / Clear

Original	Recharge

