


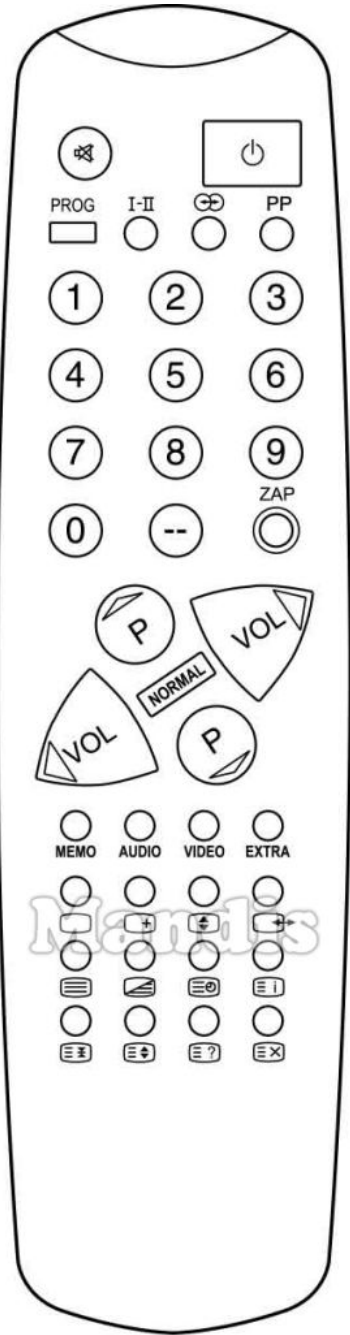

Original		Recharge		Original		Recharge	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[]		Display / Media
	--		Guide / EPG / --		[+]		Stop / Hold





Original		Recharge		Original		Recharge	
	[♦]	OPT-TOOLS SETUP	Setup / OPT /				
	[]↔	TOP MENU D.MENU	D.Menu / Top				
	[≡]	GOTO TEXT	Text / Goto				
	[/≡]	SHIFT + GOTO TEXT	Shift + Text /				
	[≡○]	EQ SUBTITLE	Subtitle / EQ				
	[≡ i]	ANGLE INFO	Info / Angle				
	[≡□]	STEP-FREEZE 	Pause / Step / Freeze				
	[≡♦]	SIZE ZOOM	Zoom / Size				
	[≡?]	RDS AV INPUT	AV / Input / RDS				
	[≡X]	CLEAR EXIT	Exit / Cancel / Clear				

