

 





 
 

 
 
 

 
 
 




 
 


 


 
 
 
 

 


 
 

 

 







Original		Rechange		Original		Rechange	
	Power		Power		OK		Ok
	Mute		Mute		Right		Right
	1		1		Down		Down
	2		2		Retour		Back
	3		3		Quitter		Exit
	4		4		Info		Info
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		↑		Shift + Ch +
	8		8		↓		Shift + Ch -
	9		9		Ch+		Ch +
	0		0		Ch-		Ch -
	HD		Media		Menu		Menu
	VOD		Smart		Radio		TV/R
	Guide		Guide		Red		Red
	Up		Up		Green		Green
	Left		Left		Yellow / Fav		Yellow



