
































 



 































Original		Rechange		Original		Rechange	
	Power		Power		FAV		Fav / Marker / PC
	Display		Display / Media		Vol+		Vol+
	Guide		Guide / EPG / -/--		CH+		CH+ / Page+
	Source		AV / Input / RDS		Vol-		Vol-
	Wide		Picture / Format		CH-		CH- / Page-
	MPX		Setup / OPT /		1		1
	Menu		Menu / Home		2		2
	Up		Up		3		3
	Back / Cancel		Back / Return		4		4
	Back / Cancel		Exit / Cancel / Clear		5		5
	Left / <<		Left		6		6
	Left / <<		<< / Tune-		7		7
	OK		OK		8		8
	Right / >>		Right		9		9
	Right / >>		>> / Tune+		Teletext		Text / Goto
	Mute		Mute / Dimmer		0		0
	Down		Down		Subtitle		Subtitle / EQ





Original		Recharge		Original	Recharge
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Index / I<<		I<< / Preset-		
	Index / I<<		Info / Angle		
	Size / Rec/Stop		Rec / Rec Mode		
	Size / Rec/Stop		Stop / Hold		
	Size / Rec/Stop		Zoom / Size		
	Hold / Play/Pause		Shift + Stop /		
	Hold / Play/Pause		Play / Slow		
	Hold / Play/Pause		Pause / Step / Freeze		
	Reveal / >>I		>>I / Preset+		
	Reveal / >>I		Smart / List		

