











 


 
 
 

 







 




Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/SAT	 AV
 Sleep	 Sleep
 TV / Radio	 TV/R
 Sort	 Media
 << EPG	 Guide

Original	Rechange
 << EPG	 <<
 Language	 Dual
 FAV >>	 Pre Ch
 FAV >>	 >>
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Ch -
 Down / CH-	 Down
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Menu	 Menu
 OK	 Ok
 A-Z	 Shift + Media
 SAT	 Smart
 Exit	 Exit



