



Original	Recharge
Power	Power
TV/VCR	TV/Radio /
DVD	Shift + 2
PR+	CH+ / Page+
1	1
2	2
3	3
PR-	CH- / Page-
4	4
5	5
6	6
Vol+	Vol+
7	7
8	8
9	9
Vol-	Vol-
0/AV	0

Original	Recharge
0/AV	AV / Input / RDS
Info	Info / Angle
Setup / Menu	Setup / OPT /
Setup / Menu	Menu / Home
Mute	Mute / Dimmer
Up	Up
Left	Left
Enter/[≡]	OK
Enter/[≡]	Text / Goto
Right	Right
DVD Menu	D.Menu / Top
Down	Down
Cancel/[≡♦]	Exit / Cancel / Clear
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
TRK/Skip-/I<<	I<< / Preset-



