
















Original	Recharge
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 I<</Skip Down	 I<< / Preset-
 >>I / Skip Up	 >>I / Preset+
 Subwoofer	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 SFC	 Eject / Surround
 OSD	 Picture / Format
 Timer	 Sleep / Timer
 TV	 TV/Radio /
 Top Menu	 D.Menu / Top

Original	Recharge
 Setup	 Setup / OPT /
 Test	 Text / Goto
 TV / AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter / Set	 OK
 Right	 Right
 Cancel	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Page	 Smart / List
 CH Select	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media





Original		Recharge	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-->10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	A-B Repeat		Yellow / YouTube / Repeat
	Power VCR		Shift + Power
	Play Mode		Shift + Play /
	Super Surround		Shift + Sound / Title
	Audio Only		Shift + Audio / Lang / I/II

Original		Recharge	
	Dolby PL		Shift + Subtitle / EQ
	FM Mode		Shift + TV/Radio / Program
	D.MIX		Shift + D.Menu / Top Menu
	Group		Shift + Setup / OPT / Tools
	RDS		Shift + AV / Input / RDS
	Center Focus		Shift + OK
	Position		Shift + Smart / List
	DVD/CD		Shift + 2
	Tuner/Band		Shift + 6

