

 








 
 








 


 


 
 
 


 

 
 







 
 

 
 

 


 



 
 


 


 

 

 


| Original | Recharge | Original | Recharge |
|-----------------|--|--------------|---|
| Power ON/Off |  Power | Input/Source |  AV |
| Mute |  Mute | CD Play |  Play |
| Every Pop |  Subt | Display |  Info |
| Vol Rs-/Effect |  Down | CD Rewind |  << |
| Sleep |  Sleep | Stop |  Stop |
| Tape 1 Preset |  +  Shift + Options | CD F.FWD |  >> |
| Preset Pause |  +  Shift + Pause | Prev./Prog- |  << |
| Vol Rs+/S.Mode |  Up | Volume+ |  Vol + |
| Funct./Direct |  Ok | Volume- |  Vol - |
| Tape 2 Pre./eq |  +  Shift + Dual | Pr 1 |  1 |
| Woofers/Speed |  Right | Pr 2 |  2 |
| CD Random |  TV/R | CD Pause |  Pause |
| Repeat |  Text | Pr 3 |  3 |
| Tape 1 Stop |  +  Shift + Stop | Pr 4 |  4 |
| Next/Prog+ |  >> | Pr 5 |  5 |
| CD/Theater |  List | Pr 6 |  6 |
| Tape 1 Hall/Ats |  +  Shift + Subt | Phono/Scan |  Media |



| Original | Rechange | Original | Rechange |
|---------------|---|----------------|---|
| Pr 7 |  7 | Classic Track |  Ch + |
| Tuner/Bypass |  Menu | Timer/A.Track |  Ch - |
| Surround/Test |  Dual | Index+/Vol Ls+ |  +  Shift + Ch + |
| Pr 8 |  8 | Track+/Karaoke |  +  Shift + Vol - |
| Intro |  Options | Index-/Vol Ls- |  +  Shift + Ch - |
| Pr 9 |  9 | | |
| Mode |  Guide | | |
| X-Bass/Bgm |  Left | | |
| Tape 1 Rec |  +  Shift + Rec | | |
| Fm Mode/Disc |  Exit | | |
| Tape 1 Rew |  +  Shift + << | | |
| Tape 1 Play |  +  Shift + Play | | |
| Pr 0/10 |  0 | | |
| Program |  Pre Ch | | |
| Tape 1 F.FWD |  Blue | | |
| Band |  Smart | | |
| Track-/Echo |  +  Shift + Vol + | | |

