
 
 



 
 

 
 


 
 




 

 


 


 









 









Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Info	 +  Shift + Info	Back	 Back
Txt Stop	 Stop	Volume+	 Vol +
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Chan.Up	 Ch +
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Original	Recharge
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Off/Tim		List	
Mix Scan		3D	
Yellow		Yellow	
Audio+		Options	
Blue		Blue	
Disp		Shift + AV	
Aft/Caf		Shift + Ok	
Color+ P.Std		>>I	
Search		Shift + TV/R	
Bright+ Mode		>>	
4.# 16:9		Format	
Contrast+		Shift + Ch +	
Color- S.Std		I<<	
Bright- Sys		<<	
Contrast-		Shift + Ch -	
Surround		Shift + Red	
Nicam/Mono		Shift + Green	
Level L		Shift + Yellow	
Level R/Woofer		Shift + Blue	

