



| Original | Recharge | Original | Recharge |
|-------------|-----------------------|---------------|-----------------------------|
| Power | Power | X | Back / Return |
| Review | Smart / List | 9 | 9 |
| Left/ <</- | Left | 0 | 0 |
| Left/ <</- | << / Preset- | Timer | Sleep / Timer |
| Right/ >>/+ | Right | PR+ | CH+ / Page+ |
| Right/ >>/+ | >> / Preset+ | Start Debut + | Green / APP / Repeat |
| Tv/VCR | AV / Input / RDS | Start Debut - | Red / Netflix / Search |
| --- | Exit / Cancel / Clear | Stop Fin + | Blue / Prime Video / Random |
| Audio | Audio / Lang I/II | PR- | CH- / Page- |
| 1 | 1 | Stop Fin - | Yellow / YouTube / Repeat |
| 2 | 2 | Date- | Vol- |
| 3 | 3 | Date+ | Vol+ |
| 4 | 4 | Prog | TV/Radio / |
| 5 | 5 | << | << / Tune- |
| 6 | 6 | 30 Sec/>> | Display / Media |
| 7 | 7 | Timer/? | + Shift + Sleep / Timer |
| 8 | 8 | Play | Play / Slow |



