 
 
 

 


 

 

 





 

 




 
 



 










Original		Rechange		Original		Rechange	
	Power		Power		Yellow		Yellow
	Mute		Mute		Blue		Blue
	EPG		Guide		Home		Smart
	Text		Text		Back		Back
	SUB		Subt		Menu		Menu
	Audio		Dual		Mouse		Media
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	Stop		Stop		Right		Right
	Shift		D. Menu		Left		Left
	Info		Info		OK		Ok
	<<		<<		Vol+		Vol +
	>>		>>		Vol-		Vol -
	Rec		Rec		Page+		>>
	Tv/Radio		TV/R		Page-		<<
	Red		Red		CH+		Ch +
	Green		Green		CH-		Ch -





Original		Rechange		Original		Rechange	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	DVB TV		Options				
	Delete		Exit				

