






Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 Mute	 Mute / Dimmer
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 Up	 Up
 CH+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear

Original	Rechange
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Pg Up	 Shift + CH+ /
 Down	 Down
 CH-	 CH- / Page-
 Pg Dn	 Shift + CH- /
 Tv/Radio	 TV/Radio /
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Sub-T	 Subtitle / EQ
 TTX	 Text / Goto
 EPG	 Guide / EPG / -/--
 Play	 Play / Slow





Original	Recharge	Original	Recharge
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 Red/Left Arrow	 Red / Netflix / Search		
 Green/Right Arrow	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 PVR	 Blue / Prime Video / Random		

Original	Recharge

