









	Original	Rechange		Original	Rechange
	Power		Power		Dev.List
	Mute		Mute		Video
	1		1		Subtitle
	2		2		Text
	3		3		Auto
	4		4		Menu
	5		5		Zoom
	6		6		Info
	7		7		Exit
	8		8		CH+
	9		9		CH-
	0		0		Up
	FAV		Pre Ch		Down
	Recall		Back		Right
	Lang		Dual		Left
	Time Shift		Smart		Enter
	Tv/Radio		TV/R		Vol+
					List
					Guide
					Subt
					Text
					Options
					Menu
					Eject
					Info
					Exit
					Ch +
					Ch -
					Up
					Down
					Right
					Left
					Ok
					Vol +





	Original	Rechange	Original	Rechange
	Vol-	 Vol -		
	Filelist	 Media		
	Rec	 Rec		
	Stop	 Stop		
	Play	 Play		
	Pause	 Pause		
	<<	 <<		
	>>	 >>		
	<<	 <<		
	>>	 >>		
	Red/FAV/Daily	 Red		
	Green/DEL/Weekl	 Green		
	Yellow/Movie/P.Inf	 Yellow		
	Blue/Lock/Timer	 Blue		

