


Original	Recharge
 On / Off	 Power
 Mute All	 Shift + Mute / Dimmer
 Mute	 Mute / Dimmer
 Stored	 Smart / List
 CD - DVD	 Shift + 2
 FM - AM	 Shift + TV/Radio / Program
 AUX	 Shift + 7
 TV	 TV/Radio /
 CBL - SAT	 Eject / Surround
 VCR	 Shift + 4
 Library	 Shift + Display / Media
 Up / Tune +	 Up
 DVD Menu	 D.Menu / Top
 Settings	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right

Original	Recharge
 Guide	 Guide / EPG / -/--
 System	 Text / Goto
 Down / Tune -	 Down
 Exit	 Exit / Cancel / Clear
 Track/Chap./CH +	 CH+ / Page+
 Volume +	 Vol+
 Track/Chap./CH -	 CH- / Page-
 Volume -	 Vol-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<< Seek	 I<< / Preset-
 >>I Seek	 >>I / Preset+
 Shuffle	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 1	 1
 2	 2

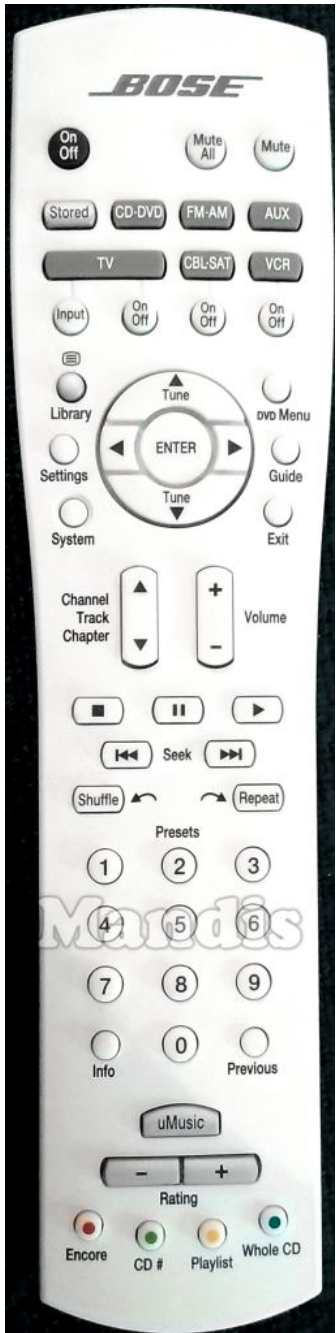



	Original	Recharge	Original	Recharge
	3	CD - STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	Info	ANGLE INFO		
	0	HDMI - SAT 0		
	Previous	RETURN BACK		
	uMusic	SHIFT + LIST SMART		
	Rating-	SHIFT + [Down Arrow]		
	Rating+	SHIFT + [Up Arrow]		
	Encore	HOME MENU		
	CD #	PC FAV MARKER		
	Playlist	MEDIA DISPLAY		
	Whole CD	SHIFT + CD - STB 3		

