















 







| Original | | Rechange | |
|---|--------------|---|-----------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | DVD Menu |  | D.Menu / Top |
|  | 0 |  | 0 |
|  | OSD / Set Up |  | Display / Media |
|  | Return |  | Back / Return |
|  | Up |  | Up |
|  | OK |  | OK |
|  | Left |  | Left |

| Original | | Rechange | |
|---|------------|---|-----------------------------|
|  | Right |  | Right |
|  | Subtitle |  | Subtitle / EQ |
|  | Down |  | Down |
|  | Audio |  | Audio / Lang I/II |
|  | Angle |  | Info / Angle |
|  | T-C |  | Smart / List |
|  | Zoom |  | Zoom / Size |
|  | I< / << |  | I<< / Preset- |
|  | I< / << |  | << / Tune- |
|  | Stop |  | Stop / Hold |
|  | Play |  | Play / Slow |
|  | >I / >> |  | >> / Tune+ |
|  | >I / >> |  | >>I / Preset+ |
|  | Repeat |  | Green / APP / Repeat |
|  | Repeat A-B |  | Yellow / YouTube / Repeat |
|  | Pause |  | Pause / Step / Freeze |
|  | Shuffle |  | Blue / Prime Video / Random |

