









 



 





 





















 








 


 
 
 
 







 


 
 





	Original	Rechange		Original	Rechange
	Power		Power		Info
	Mute		Mute		EPG
	1		1		FAV
	2		2		Audio
	3		3		Recall
	4		4		Menu
	5		5		Exit
	6		6		Up / CH+
	7		7		Up / CH+
	8		8		Down / CH-
	9		9		Down / CH-
	0		0		Right / Vol+
	Page-		I<<		Right / Vol+
	Page+		>>I		Left / Vol-
	Subtitle		Subt		Left / Vol-
	Teletext		Text		OK
	Zoom		Eject		Red / Play/Pause
					Info
					Guide
					Pre Ch
					Dual
					Back
					Menu
					Exit
					Up
					Ch +
					Down
					Ch -
					Right
					Vol +
					Vol -
					Left
					Ok
					Red





Original		Recharge		Original	Recharge
	Red / Play/Pause		Play		
	Red / Play/Pause		Pause		
	Green / TV/Radio		Green		
	Green / TV/Radio		TV/R		
	Yellow / Edit		Yellow		
	Blue / Preview		Blue		

