























 



 
Original	Recharge
 Power	 Power
 TV	 Red
 VCR	 Green
 TV / AV	 AV
 AUX	 Shift + Red
 Tuner / Band	 Yellow
 DVD / CD	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Recharge
 Mute	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 Volume +	 Vol +
 Volume -	 Vol -
 I<< Skip	 I<<
 >>I Skip	 >>I
 << Slow/Search	 <<
 >> Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu / Direct Navigator	 Shift + Menu
 Top Menu / Direct Navigator	 List
 Menu / Play List	 Menu
 Up	 Up





Original	Rechange
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Functions	 Smart
 Return	 Back
 Subwoofer	 Shift + Dual
 Super SRND.	 Shift + Options
 H.Bass	 Shift + D. Menu
 SFC	 D. Menu
 C.Focus	 3D
 Dolby PL II	 Format
 Mix 2CH	 Shift + Format
 Sleep	 Sleep
 Quick OSD	 Info
 Zoom	 Eject
 Manual Skip	 Shift + >>I

Original	Rechange
 Audio	 Dual
 Subtitle	 Subt
 Muting	 Mute
 Setup	 Options
 FL Display	 Shift + Info
 Group	 TV/R
 Angle / Page	 Shift + TV/R
 Repeat	 Text
 Play Mode	 Shift + Play
 Advanced Disc Review	 Shift + Smart
 Quick Replay	 Media
 Play Speed	 Shift + Pause
 CH Select	 Pre Ch
 Test	 Shift + Text









 



 



 







 


 


 

 


 
 





 


Original	Recharge
Power	Power
Power AV	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥10 / -/-	GUIDE Guide
Tv/AV	TIMER AV AV
CH+	+ Ch +
CH-	CH - Ch -
Tv Vol+	+ Vol +

Original	Recharge
Tv Vol-	Vol -





Original		Recharge	
	Power		Power
	Power AV	 + 	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≧10 / -/-		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>

Original		Recharge	
	Pause		Pause
	Play		Play
	Stop		Stop

