



 




 





 





 







 



 





	Original	Rechange	Original	Rechange
	Power			Play / Pause
	Mute			Play / Pause
	USB			
	BT			
	AUX			
	SD			
	OPT			
	Line In			
	Vol+			
	Vol+			
	Vol-			
	Vol-			
	>>I			
	>>I			
	I<<			
	I<<			
	Play / Pause	