









 













 


 














	Original	Recharge		Original	Recharge
	Power		Power		Subpage
	Mute		Mute		Pre-CH
	Display		Info		PC
	CH+		Ch +		Tv/Video
	CH-		Ch -		Sleep
	Vol+		Vol +		Sound
	Vol-		Vol -		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Menu
	5		5		Mix
	6		6		Teletext
	7		7		Text Size
	8		8		Red
	9		9		Green
	0		0		Yellow





Original		Rechange		Original	Rechange
	Blue		Blue		
	Index		List		
	Subtitle		Subt		
	Hold		D. Menu		
	Reveal		Options		
	PIP/POP		3D		
	PIP Swap		Back		
	PIP Size		Eject		

