 



 










 

 



 





 
 



















 

 





 









 


 




 






 
 


Original	Rechange
 Source	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 TXT	 Text / Goto
)) []	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 [>]	 Eject / Surround
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 <<<	 <<< / Tune-
 <<<	 I<<< / Preset-
 >>>	 >>> / Tune+
 >>>	 >>>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
	 Sound / Title
 Del	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Menu / Home
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mouse	 Smart / List
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Settings	 Setup / OPT /
 Back	 Back / Return
 EPG	 Guide / EPG / -/-





Original		Rechange		Original		Rechange	
	Recall		Fav / Marker / PC				
	FAV	 + 	Shift + Fav / Marker / PC				
	Info		Info / Angle				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Format		Picture / Format				

