



Original		Rechange		Original		Rechange	
	Power		Power		5		5
	[+]		Display / Media		6		6
	Mute		Mute / Dimmer		7		7
	Tv/AV		AV / Input / RDS		8		8
	Up		Up		9		9
	Down		Down		-/--		Guide / EPG / -/--
	Right		Right		0/VCR		0
	Left		Left		0/VCR		Shift + 4
	Vol+		Vol+		Red		Red / Netflix / Search
	Vol-		Vol-		C		Exit / Cancel / Clear
	Timer		Sleep / Timer		Green		Green / APP / Repeat
	1		1		Blue		Blue / Prime Video / Random
	N		D.Menu / Top		Hold		Shift + Stop /
	F		Menu / Home		Yellow		Yellow / YouTube / Repeat
	2		2		Index		Info / Angle
	3		3		Pause/Step		Pause / Step / Freeze
	4		4		Reveal		Smart / List





Original	Rechange
 Time Text	 TV/Radio /
 Play	 Play / Slow
 Tv/Text	 Text / Goto
 Stop	 Stop / Hold
 >>	 >> / Tune+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 F/T/B	 Zoom / Size
 Power VCR	 Shift + Power
 Programme Up	 CH+ / Page+
 Programme Down	 CH- / Page-

Original	Rechange

