 

 



 



 




 


 
 
 
 
 





 

















Original	Recharge
 Power	 Power
 Standby	 +  Shift + Power
 Tuner	 1
 CD	 2
 CD-R	 3
 DTV	 4
 CBL/SAT	 5
 MD/Tape	 6
 Net/USB	 7
 VCR 1	 8
 DVR/VCR 2	 9
 DVD	 - / - / GUIDE Guide
 V-AUX/Dock	 0
 Preset Up	 + CH Ch +
 Preset Down	 CH - Ch -
 A/B/C/D/E	 HOME SMART Smart
 Vol+	 + VOL Vol +

Original	Recharge
 Vol-	 Vol -
 Mute	 Mute





Original	Recharge
 Power	 Power
 Standby	 Shift + Power
 Tuner	 1
 CD	 2
 CD-R	 3
 DTV	 4
 CBL/SAT	 5
 MD/Tape	 6
 Net/USB	 7
 VCR 1	 8
 DVR/VCR 2	 9
 DVD	 Guide
 V-AUX/Dock	 0
 Preset Up	 Ch +
 Preset Down	 Ch -
 A/B/C/D/E	 Smart
 Vol+	 Vol +

Original	Recharge
 Vol-	 Vol -
 Mute	 Mute

